 




Quick Setup Guide

VIZIO Elevate 7.1.4 Pro Soundbar

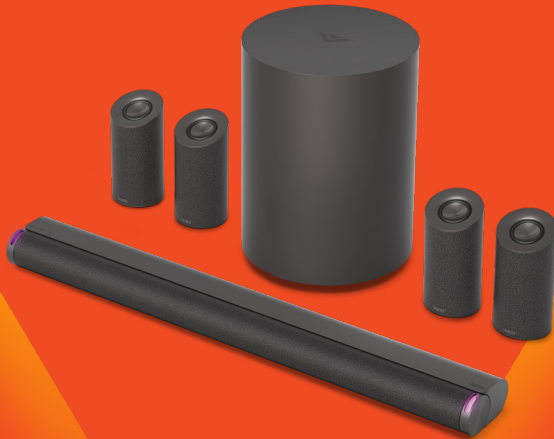

Lets get started.

Step-by-step setup instructions on the next page.

Get to know your soundbar

Audio Performance

For the highest quality HDMI supported audio performance, enable CEC settings on your TV. Refer to your TV manual to learn more.

Using Bluetooth® to stream music, podcasts and more

1. Open the VIZIO mobile app and select your soundbar.
Tap *Mobile Device (Bluetooth)* and follow instructions. The blue LED will blink rapidly and a tone will play twice to indicate the soundbar is in pairing mode.
2. Go to the Bluetooth settings on your mobile device, select *VIZIO ELEVATE* and pair. A tone will play when successfully paired.

Don't have the VIZIO mobile app? Quick press the soundbar Bluetooth (⌘) button and follow step 2.

VIZIO QuickFit®

 
The simple mounting solution that attaches the soundbar directly to the bottom of select VIZIO TVs for a seamless fit.

Learn more at vizio.com/quickfit




Home theater setup recommendations


Position the soundbar (A), wireless subwoofer (B), and wireless surround speakers (C) to your desired room layout. For the best audio experience, surround speakers should be placed in line with each other, with their front VIZIO logos pointed toward the center of your seating, and the subwoofer placed in the corner of the room by the same wall as the TV. Use the VIZIO mobile app to complete and fine tune your audio based on your setup.

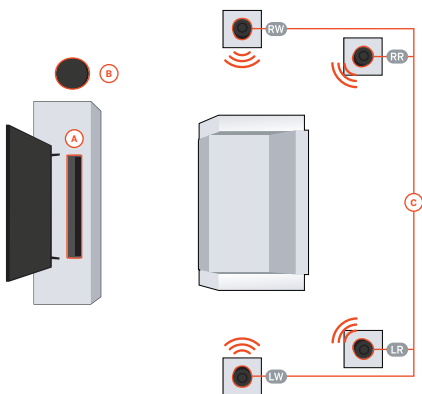

 Adjust the surround volume and balance when placing surrounds further apart.

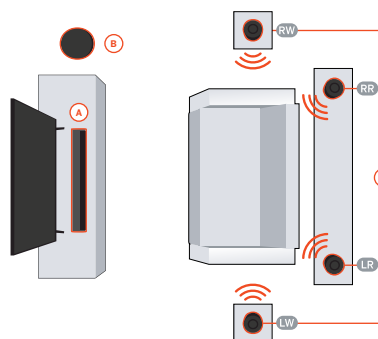

 Customize subwoofer intensity, surround volume and balance, *ClearDialog*, and more to your preference.

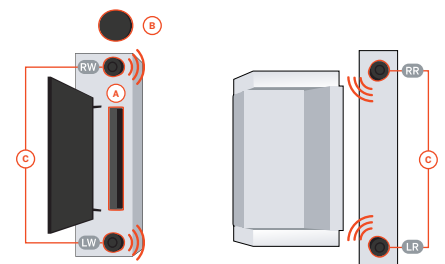

If placing surrounds in front of your seating area, select *Front Wide Mode* under surround speaker settings.



Important

Place the wireless surround speakers to your right and left as you face the television. Look at the bottom of each surround speaker to identify which is Left Rear (LR), Right Rear (RR), Left Wide (LW), and Right Wide (RW). Do not place the wireless surrounds on the floor, as optimal position is at or above ear level.



1 Download the VIZIO mobile app to control your soundbar

The VIZIO mobile app and a Walmart account are required for control of soundbar functionality, settings, and to receive system updates. Click the icons below.



No mobile device?

Your TV remote will also control soundbar volume and mute.

3 Pair & connect with the VIZIO mobile app

1. Stand near the soundbar and enable Bluetooth® on your mobile device.
2. Open the VIZIO mobile app to pair and connect to the soundbar. The app will discover your soundbar for the first 72 hours after installation. Select **VIZIO ELEVATE** from the list of available devices.



If pairing after the first 72 hours, ensure the soundbar is powered on. Then, quick press the soundbar Bluetooth (B) button to initiate the pairing process for up to 1 hour. Open the VIZIO mobile app to pair and connect to the soundbar.

5 Optimize your home theater audio in the VIZIO mobile app

Personalize audio settings and access advanced controls like Surround Sound Volume, Balance, ClearDialog, Bass, and more.

 
Adjust the *Height* setting to enhance the immersive sound effect when Dolby Atmos and DTS:X content is detected.

Need help with your Elevate 7.1.4 Pro (SL714PW-1006)?

[Click here](#) for additional support and documentation.

2 Plug in & connect the soundbar

Plug the soundbar in using the included power cable. A welcome tone will play when powered on. Then, connect the soundbar to the HDMI ARC or eARC port on your TV with the included HDMI cable.

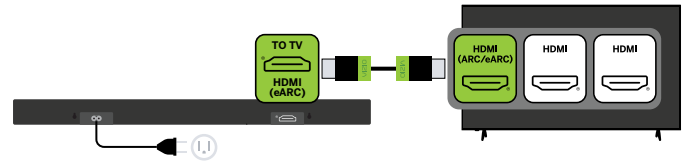


TV Audio out setting

To experience 7.1 Dolby Atmos Audio, ensure the TV Audio Out setting is set to *Digital* or *Pass Through*. Refer to your TV manual to learn more.

4 Position & plug in the surrounds and subwoofer

 Plug in the subwoofer and surrounds using the included power cables. When powered on and connected, LED lights will turn on.

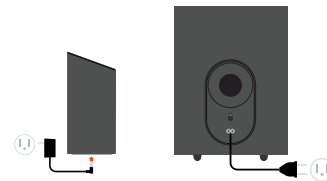

Avoid placing within 5ft of your WiFi router to prevent audio interference. Refer to *Home theater setup recommendations* for product positioning based on your room layout.

The rotating height speakers in the Elevate soundbar can be modified from the default *Auto* setting to either *Up* or *Wide*.

Customize surround settings based on placement for room filling audio.

The surround settings default is set to *Side Wide* to ensure audio is always heard—even when content does not support surround sound.

Reference the User Manual for a complete list and detailed explanation of audio controls available in the VIZIO mobile app.

